


S-MART ASSEMBLY INSTRUCTIONS

Product : S-Mart Double Sided Bay 914L – Mesh Backpanels


SKU:

OVERVIEW

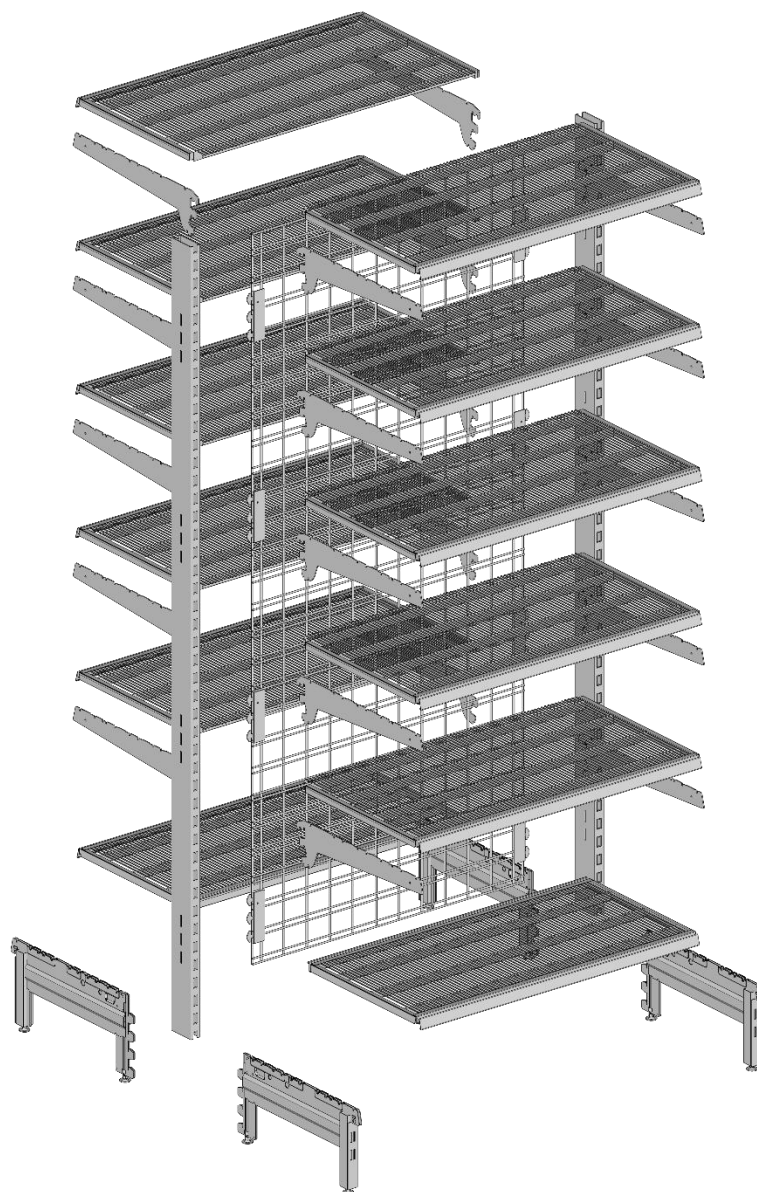


INSTRUCTIONS


1. Connect base legs to upright.

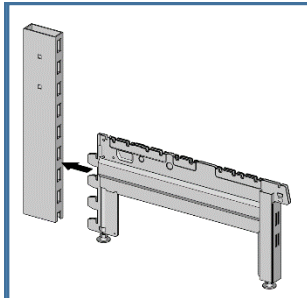

a) Insert base leg into lowest level of upright. Ensure rear lugs are pointing upwards.


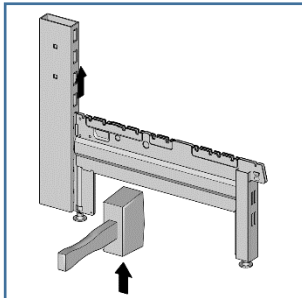


b) Use Rubber Mallet to tap base leg firmly upwards into upright. Ensure base leg is tightly fitted into base leg.

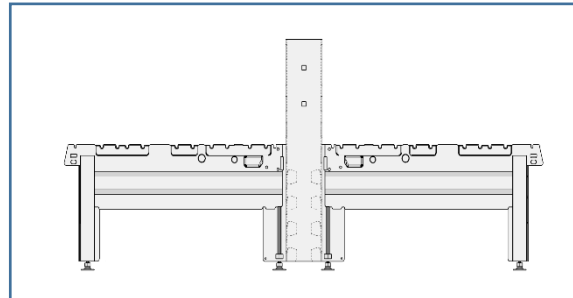


c) For double sided bays, attach 2 x base legs to all uprights in the above configuration.


2. Attach Mesh Infill Panel.

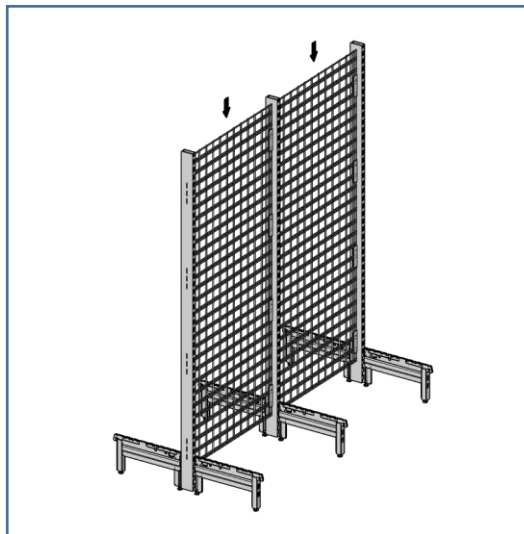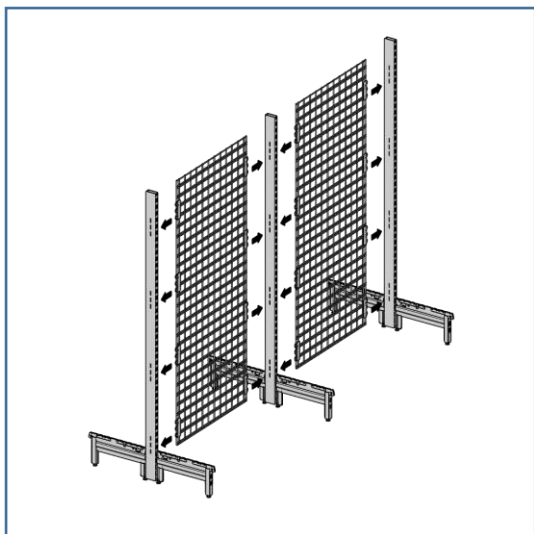

3. Insert Mesh Locks to Secure Mesh Panel into Upright Slots.

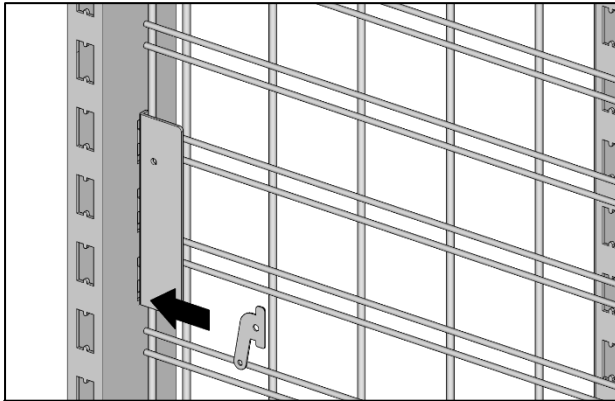


a) Insert mesh lock into Panel/Upright connection slot as indicated above.

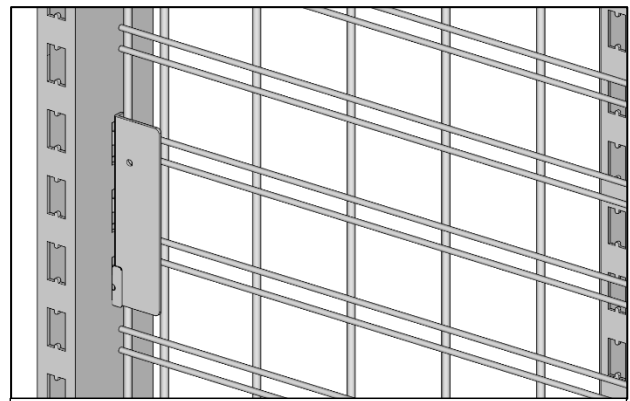


b) Ensure lock is fully inserted into slot as indicated above.


4. Attach Base Shelf.

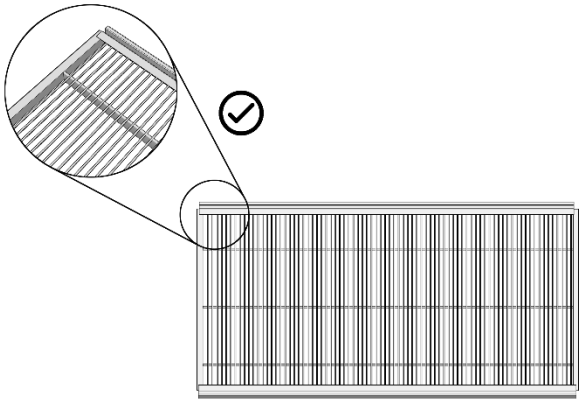


a) Base shelf does not have corner cutouts as indicated above.

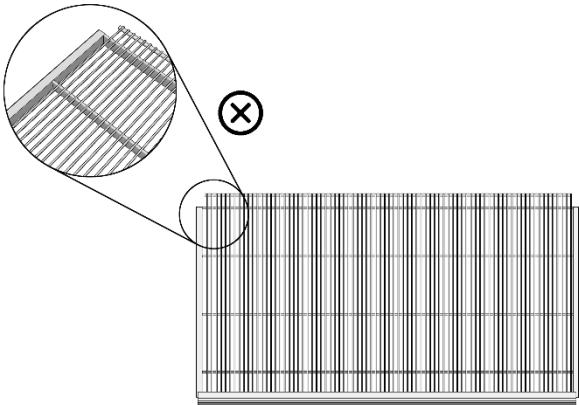


b) Do not use shelf with corner cutout.

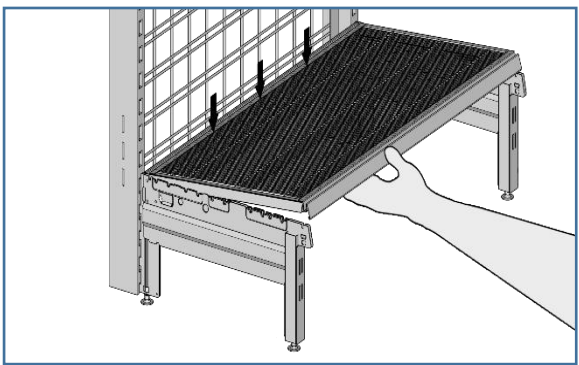

a) Lower shelf into base legs starting at the rear. Adjust base legs as required to align with shelf.

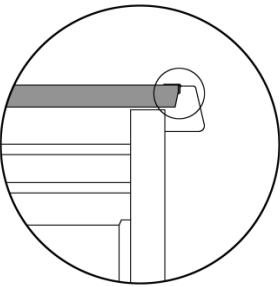


b) Position shelf as far as back on the base leg as possible. Shelf should lock into place in front position as per above image.

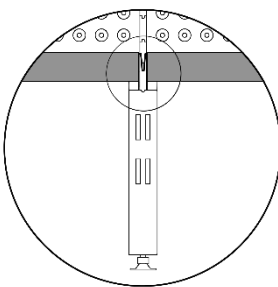


c) Centre view


5. Attach Upper Level Shelves

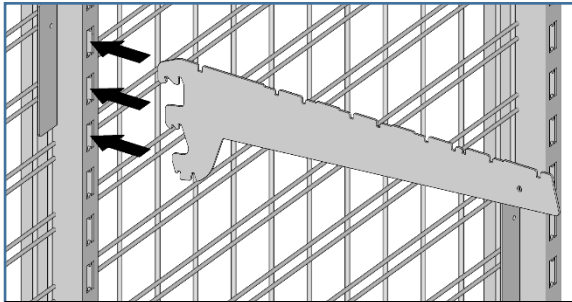


a) Push back of Shelf Bracket as far back as possible into centre upright

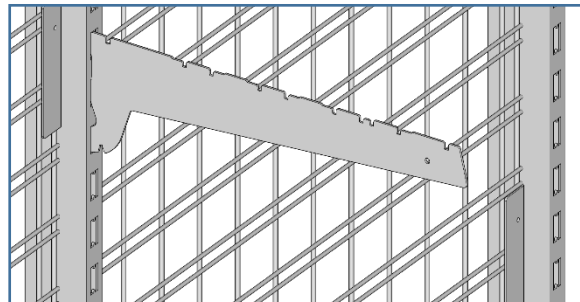

b) Locate shelf bracket securely into upright.

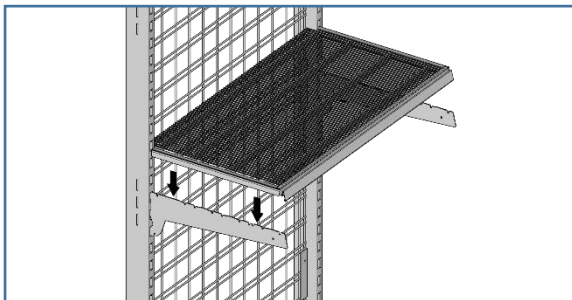

c) Lower shelf onto brackets.

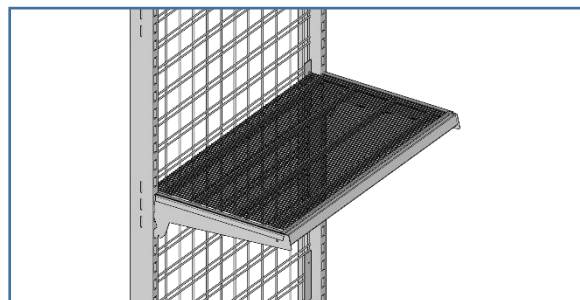

d) Ensure shelf locks into position.

